

NEC Feature Clear (SV)

Useful if the handset is not behaving predictably or a feature has been set unintentionally. (DND, Headset Mode etc)

On any NEC Telephone

- Press **Speaker**
- Dial **7 2 0** on the Keypad

(Phone will beep and say “Cancel” on the headset)

- Press **Speaker**

*(Please note some customer systems may require a * before the 720 feature code)*