## Using Headset Mode

To enable or disable

- Press Speaker
- Dial **798** on the Keypad

(The phone will now use the headset jack on the underside of the phone, use speaker to answer and end calls)

• Press Speaker

Please note some customer systems will require a \* before the 798 feature code.

Note that DT710 Handsets are not compatible with headsets.